

# Merrytek

Microwavwe sensor user manual - MC 090S E

N.B. Switch off mains before changing settings!

## Settings

Detection area, hold time and daylight sensor can be set by using DIP switches on the sensor. Note that reducing the detection area will also reduce the sensitivity.

#### **Detection area**

I: up to 100%
II: upt o 75%
III: up to 50%
IV: up to 25%

#### **Detection area**

		1	2	
ON 1	ı	ON	ON	100%
	II	ON	-	75%
	Ш	-	ON	50%
	IV	_	-	25%

Sensitivity: Set to 50% from factory.

#### Hold time

I: 5 sec
II: 30 sec
III: 1 min
IV: 3 min
V: 5 min
VI: 10 min
VII: 20 min
VIII: 30 min

#### Hold time

ON T		3	4	5	
	Τ	ON	ON	ON	5s
	П	ON	ON	-	30s
	Ш	ON	-	ON	1min
	IV	ON	_	-	3min
	٧	-	ON	ON	5min
	VI	-	ON	-	10min
	VII	-	-	ON	20min
	VIII	-	-	_	30min

**Delay time**: Set to 5 min from factory.

## Daylight sensor

I: 2 lux II: 10 lux III: 25 lux V: Disable\*

## Daylight sensor

		6	7	8	
	ı	ON	ON	ON	2Lux
ON	П	ON	ON	-	10Lux
	Ш	-	ON	-	25Lux
	ı∨	ON	-	_	50Lux
	V	_	-	_	Disable

Daylight sensor: Disabled from factory.


<sup>\*</sup>Disable means the daylight sensor does not work. The sensor will turn on light once motion is detected regardless of ambient light level.



# Merrytek


Detection range for different sensitivities

# Ceiling mounting

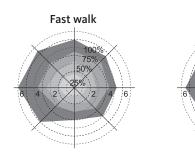



Mounting height: 3m

# Wall mounting

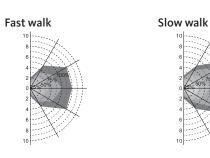

Mounting height: 2m

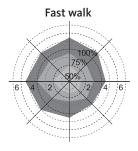

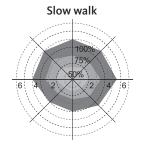


Slow walk

## Mounting height: 6m

50%, 75%, 100% detection sensitivity is workable when installed at 6m mounting height. Only 25% sensitivity is not able to detect motion signal.

## Installation on/off

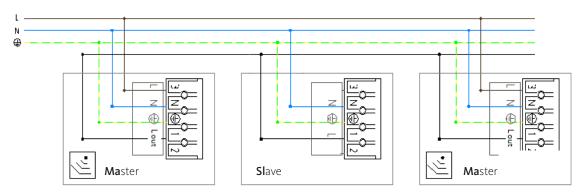

1: L-out for powering on/off luminaires. Max 400 W total power.