 


WARNING

- Parts List: LED T5 Compatible Tube, Installation instructions
- Please read the installation instructions carefully and follow instructions to ensure safety
- The LED tube is only suitable with direct connection to AC mains 230 V
- Only to apply in dry indoor usage and environments, outdoor applications requires IP rated fixtures.
- LED lamps must be installed by a professional electrician.
- Once it is installed, do not change any components or structure of the LED lamp.
- This lamp is designed for general lighting service (excluding e.g. explosive atmospheres)
- Ambient temperature (Ta): -20°C TO 50°C (-4°F TO 122°F)
- This lamp may not be suitable for use in all applications where a traditional fluorescent lamp has been used. The temperature range of this lamp is more restricted. In case of doubt regarding the suitability of the application the manufacturer of this lamp should be consulted.
- Not suitable for use with dimmers
- The lamp is design to replace;
 - 1149 mm T5 G5 16W : HE 28W
 - 1449 mm T5 G5 18,5W : HE 35W
 - 1449 mm T5 G5 26W : HO 49W
 - 1149 mm T5 G5 27W : HO 54W
- Wiring diagram:



 AURA LIGHT

www.auralight.com



Manual Aura LED Opti T5 Long Life HE/HO AC

■ Specification

Length (mm)	Base	Power (W)	Color Temperature (K)	Current (A)
1149	G5	16	3000 / 4000	0.076A
1449	G5	18.5	3000 / 4000	0.085A
1449	G5	26	3000 / 4000	0.118A
1149	G5	27	3000 / 4000	0.113A



Lamp to be used
in dry conditions







Lamp not suitable for
emergency operation



Dimming not allowed



50/60Hz

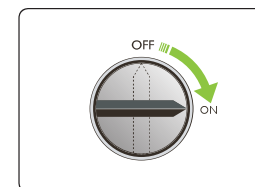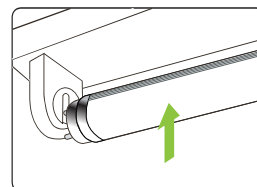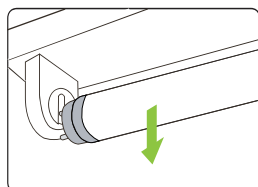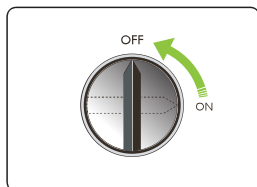

EN	1. Turn the power off	2. Remove all existing fluorescent tubes from luminaires if any	3. Install Aura Opti T5 Long Life HO/HE AC LED retrofit lamp, secure the position by turning the lamp by 90°	4. Turn on the power
SE	1. Stäng av strömmen	2. Ta bort alla befintliga rör från armaturen	3. Installera Aura Opti T5 Long Life HO/HE AC LED retrofit lamp, säkra positionen genom att vrida ljuskällan 90°	4. Sätt på strömmen
NO	1. Slå av strømmen	2. Ta ut alle eksisterende lysrør fra armaturen	3. Installer Aura Opti T5 Long Life HO/HE AC LED retrofit røret, sikre posisjon ved å vri på røret 90°	4. Slå på strømmen
DK	1. Sluk for spændingen	2. Fjern alle lysstofrør fra armaturet	3. Monter Aura Opti T5 Long Life HO/HE AC LED retrofit lysstofrør, sikre positionen ved at dreje lyskilden 90°	4. Tænd for spændingen
FIN	1. Katkaise virta	2. Poista valaisimista kaikki loistelamput	3. Asenna Aura Opti T5 Long Life HO/HE AC retrofit-lamppu varmista asennus kääntämällä lamppua 90°	4. Kytke virta päällä
DE	1. Schalten Sie die Leuchte stromfrei	2. Entfernen Sie alle Leuchstofflampen insofern vorhanden	3. Setzen Sie die Aura Opti T5 Long Life HO/HE AC LED-Röhre ein und drehen sie die Lampe um 90°, damit sie arretiert.	4. Schalten Sie das Licht ein
NL	1. Schakel de stroom uit	2. Verwijder de fluorescentielampen indien aanwezig	3. Installeer de Aura Opti T5 Long Life HO/HE AC retrofit lichtbron. Stel de positie van de lamp in door deze 90° te draaien.	4. Schakel de stroom in
ES	1. Desconecte la corriente	2. Retire los fluorescentes de las luminarias	3. Instale el tubo tipo retrofit Aura Opti T5 Long Life HO/HE AC LED. Asegurar la posición girando la lám pada 90°.	4. Conecte la corriente
FR	1. Coupez l'électricité	2. Retirez tous les tubes fluorescents existants de luminaire	3. Installez le tube Aura Opti T5 Long Life HO/HE AC LED retrofit et sécurisez sa position par une rotation à 90°.	4. Mettez le luminaire sous tension
PT	1. Desligue a corrente	2. Remova todos os tubos fluorescentes existentes nas luminárias	3. Instale a lâmpada LED retrofit Aura Opti T5 Long Life HO/HEAC, e assegure-se da sua posição a 90°.	4. Ligue a corrente
IT	1. Portare l'interruttore su OFF	2. Smontare tutti i tubi fluorescenti eventualmente presenti negli apparecchi di illuminazione	3. Installare il tubo retrofit LED Aura Opti T5 Long Life HO/HE AC LED fissare la posizione ruotando la lampada di 90°.	4. Portare l'interruttore su ON