

WARNING

- Parts List: LED T5 ECG Compatible Tube, Installation instructions
- Please read the installation instructions carefully and follow instructions to ensure safety
- The LED tube is only suitable with compatible HO-HE Ballast
- Only to apply in dry indoor usage and environments, outdoor applications requires IP rated fixtures.
- LED lamps must be installed by a professional electrician.
- Once it is installed, do not change any components or structure of the LED lamp.
- This lamp is designed for general lighting service (excluding e.g. explosive atmospheres)
- Ambient temperature (Ta): -20°C to 50°C (-4°F to 113°F)
- This lamp may not be suitable for use in all applications where a traditional fluorescent lamp has been used. The temperature range of this lamp is more restricted. In case of doubt regarding the suitability of the application the manufacturer of this lamp should be consulted.
- No modifications of the luminaire which the LED lamp is to be used with are to be made.
- Lumen-values may differ depending on HO-HE driver
- A limited amount of drivers require a specific direction of the lamp to be installed, please test the product and confirm functionality before any larger installation
- Not suitable for use with dimmers
- The lamp is design to replace;
 - 549 mm : T5 G5 7W
 - 1149 mm : T5 G5 17W
 - 1449 mm : T5 G5 18W
 - 1449 mm : T5 G5 26W
 - 1149 mm : T5 G5 26W
 - 1449 mm : T5 G5 37W

 AURA LIGHT

www.auralight.com







Manual Aura LED Opti T5 HE/HO HF G3

■ Specification

Length (mm)	Base	Power (W)	Color Temperature (K)
549	G5	7	3000 / 4000
1449	G5	17	3000 / 4000
1449	G5	18	3000 / 4000
1149	G5	26	3000 / 4000
1449	G5	26	3000 / 4000
1449	G5	37	3000 / 4000



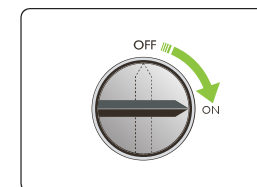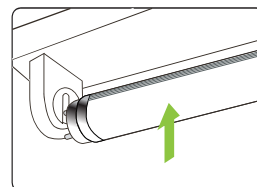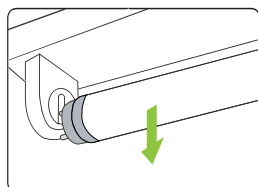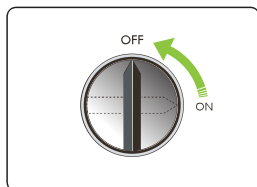

- | | | | | |
|------------|---------------------------------------|--|--|-------------------------------------|
| EN | 1. Turn the power off | 2. Remove all existing fluorescent tubes from luminaires if any | 3. Install Aura Opti T5 Long Life HO HF LED retrofit lamp, secure the position by turning the lamp by 90° | 4. Turn on the power |
| SE | 1. Stäng av strömmen | 2. Ta bort alla befintliga rör från armaturen | 3. Installera Aura Opti T5 Long Life HO HF LED retrofit lamp, säkra positionen genom att vrida ljuskällan 90° | 4. Sätt på strömmen |
| NO | 1. Slå av strømmen | 2. Ta ut alle eksisterende lysrør fra armaturen | 3. Installer Aura Opti T5 Long Life HO HF LED retrofit røret, sikre posisjon ved å vri på røret 90° | 4. Slå på strømmen |
| DK | 1. Sluk for spændingen | 2. Fjern alle lysstofrør fra armaturet | 3. Monter Aura Opti T5 Long Life HO HF LED retrofit lysstofrør, sikre positionen ved at dreje lyskilden 90° | 4. Tænd for spændingen |
| FIN | 1. Katkaise virta | 2. Poista valaisimista kaikki loistelamput | 3. Asenna Aura Opti T5 Long Life HO HF retrofit-lamppu varmista asennus kääntämällä lampputa 90° | 4. Kytke virta päällä |
| DE | 1. Schalten Sie die Leuchte stromfrei | 2. Entfernen Sie alle Leuchstofflamp-en insofern vorhanden | 3. Setzen Sie die Aura Opti T5 Long Life HO HF LED-Röhre ein und drehen si die Lampeum 90°, damit sie arretiert. | 4. Schalten Sie das Licht ein |
| NL | 1. Schakel de stroom uit | 2. Verwijder de fluorescentielamp-en indien aanwezig | 3. Installeer de Aura Opti T5 Long Life HO HF retrofit lichtbron. Stel de positie van de lamp in door deze 90° te draaien. | 4. Schakel de stroom in |
| ES | 1. Desconecte la corriente | 2. Retire los fluorescentes de las luminarias | 3. Instale el tubo tipo retrofit Aura Opti T5 Long Life HO HF LED. Asegurar la posición girando la lám pada 90°. | 4. Conecte la corriente |
| FR | 1. Coupez l'électricité | 2. Retirez tous les tubes fluorescents existants de luminaire | 3. Installez le tube Aura Opti T5 Long Life HO HF LED Retrofit et sécurisez sa position par une rotation á 90°. | 4. Mettez le luminaire sous tension |
| PT | 1. Desligue a corrente | 2. Remova todos os tubos fluorescentes existentes nas luminárias | 3. Instale a lâmpada LED retrofit Aura Op , e assegue-se da sua posição á 90°. | 4. Ligue a corrente |
| IT | 1. Portare l'interruttore su OFF | 2. Smontare tutti i tubi fluorescenti eventualmente presenti negli apparecchi di illuminazione | 3. Installare il tubo retrofit LED Aura Opti T5 Long Life HO HF fissa re la posizione rutando la lampada di 90°. | 4. Portare l'interuttore su ON |