



Sevede CE

Installation manual


1: Luminaire ceiling brackets.

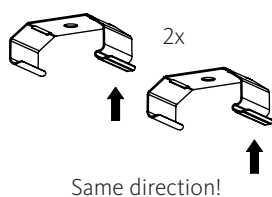


| VERSION | C:C MIN. (mm) | C:C MAX. (mm) |
|----------------|------------------|------------------|
| Sevede CE 600 | 300 | 540 |
| Sevede CE 1200 | 600 | 1100 |

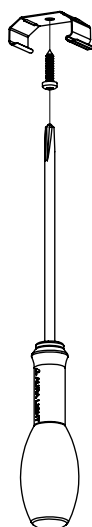

2: Mount luminaire ceiling brackets (2x). Screws not provided.


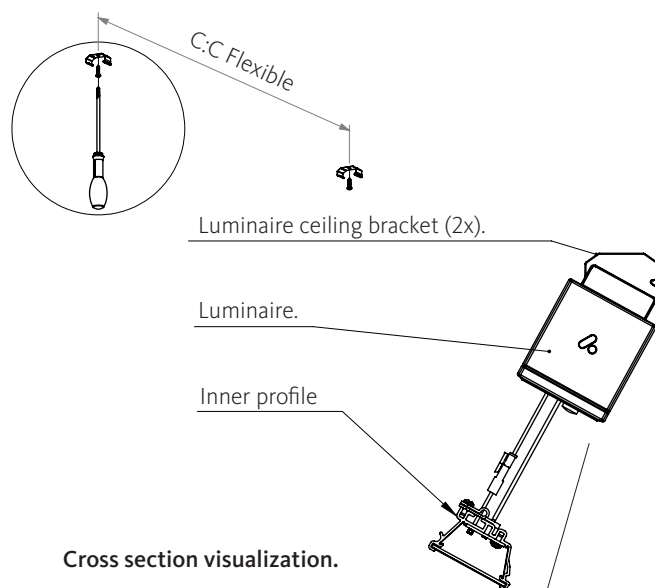


3: Mount luminaire.

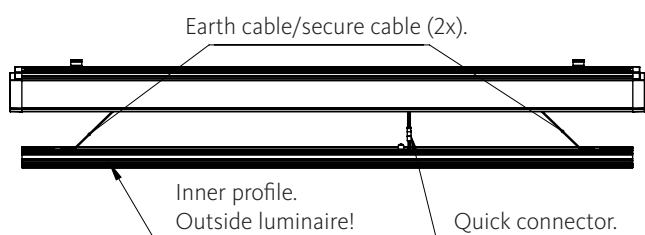


Cross section visualization.


Hang luminaire.
Hinge-function.

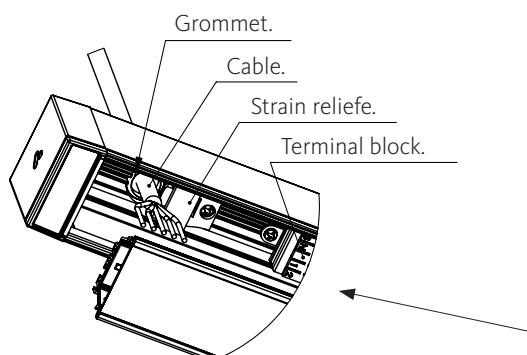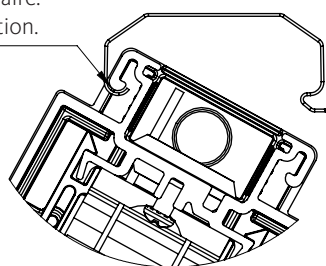



4: Prepare cable.

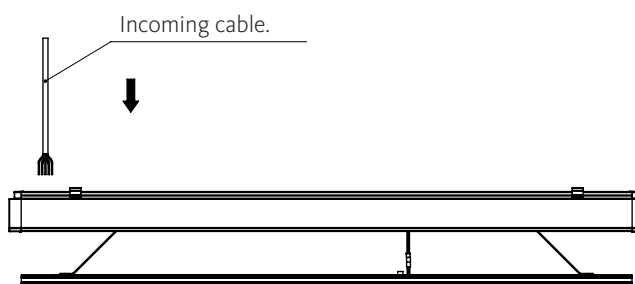


5: Secure luminaire.

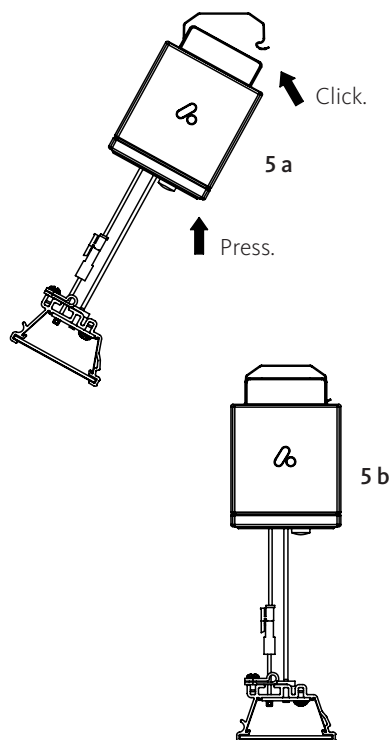


6: Electrical installation.

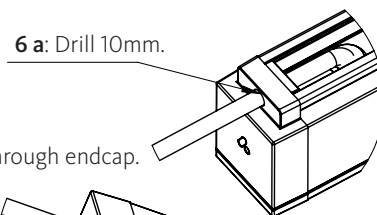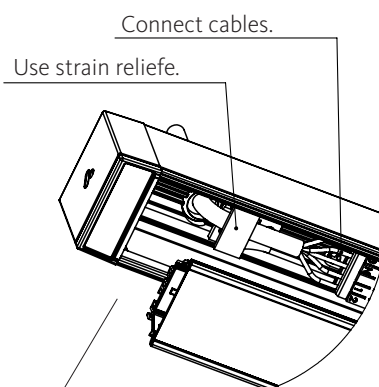


6 b: Through endcap.

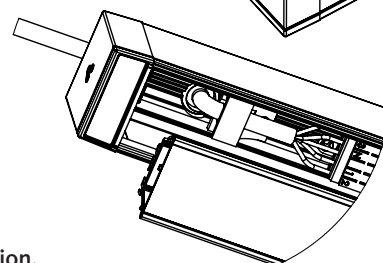

7: Mount inner profile.

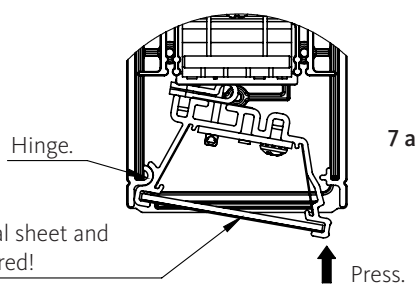



Secure optical sheet and keep it centered!

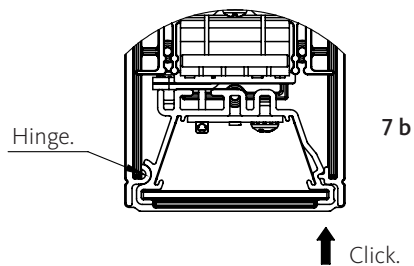

Cross section visualization.



Keep inside cables away when mounting inner profile!

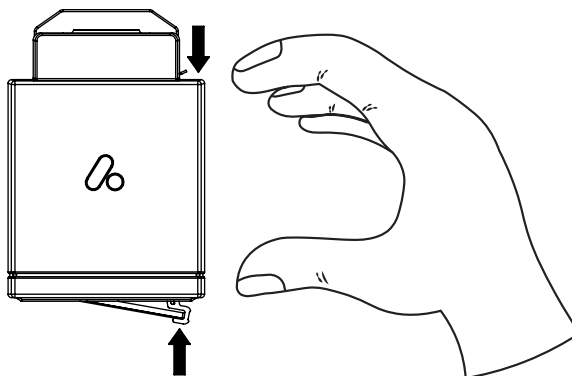







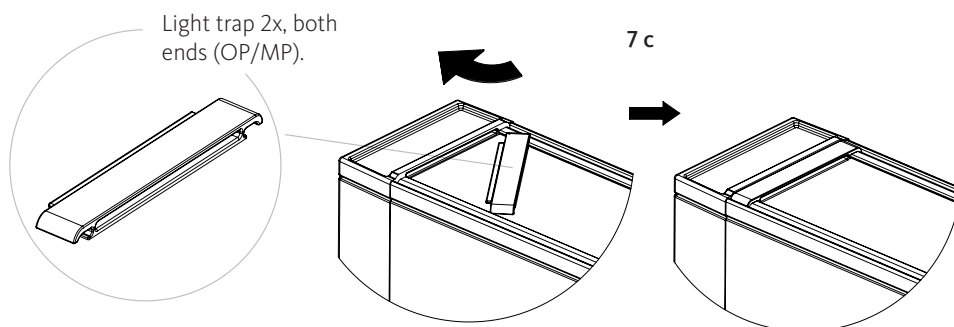


8: Removal of inner profile.
Only for maintenance.

Orientation

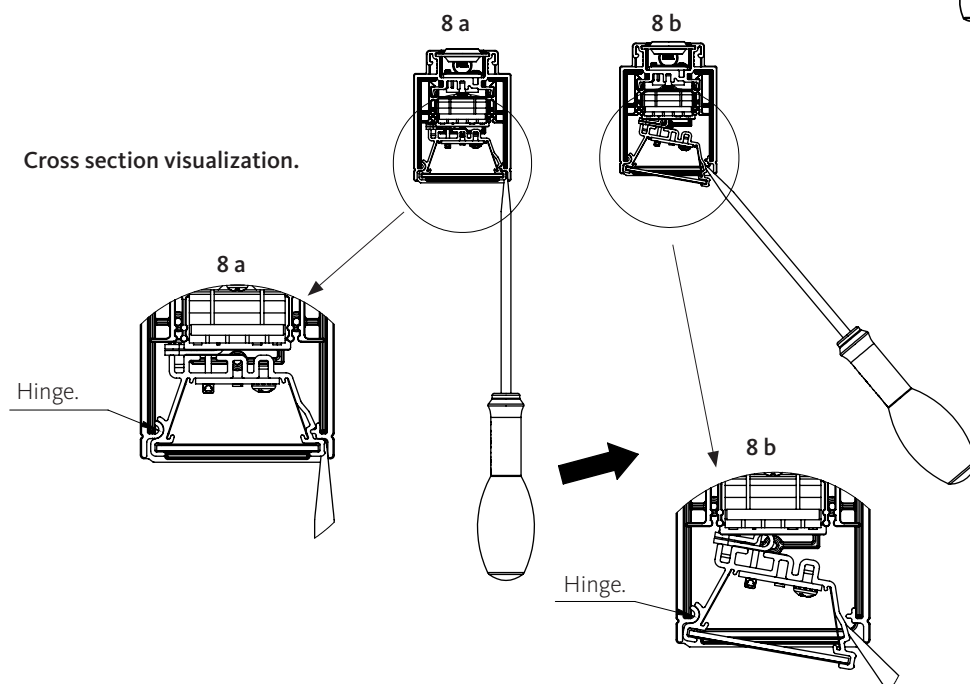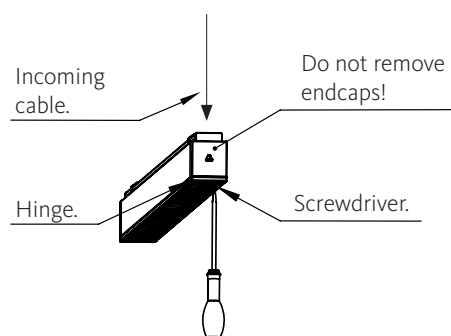

8 c

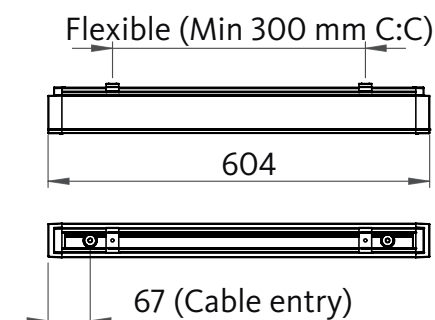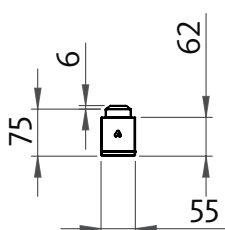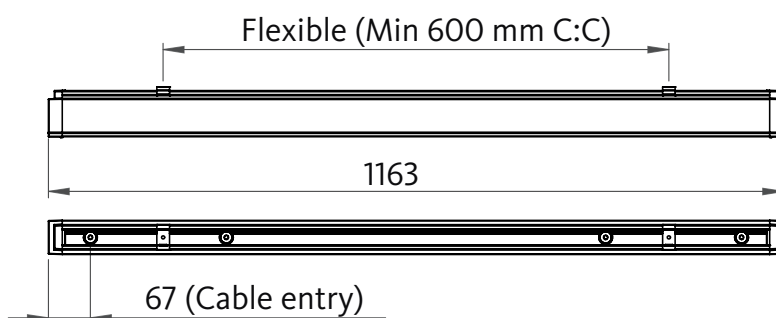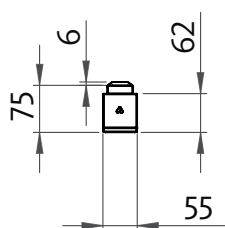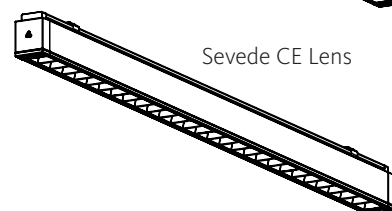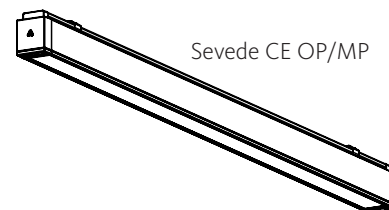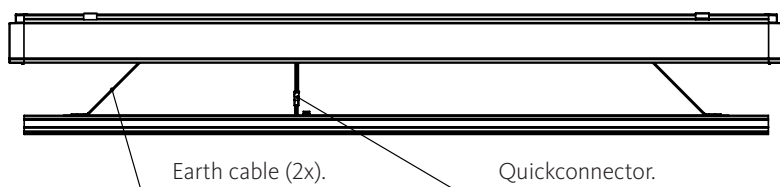

Note: The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Basic insulation between supply- and control-terminals (DALI).

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.



Installation movie