



Sevede WA

Installation manual


1: Luminaire wall brackets

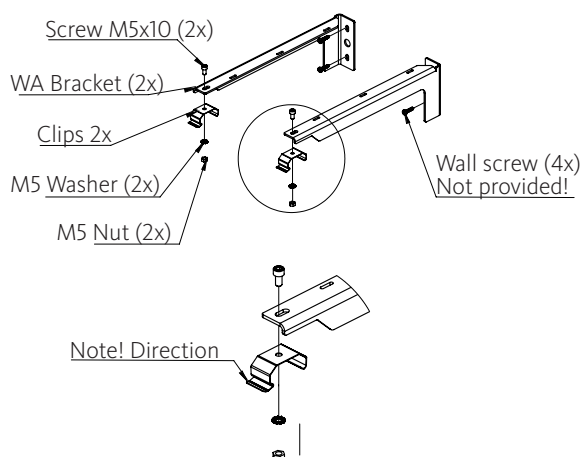




2: Mount luminaire wall brackets

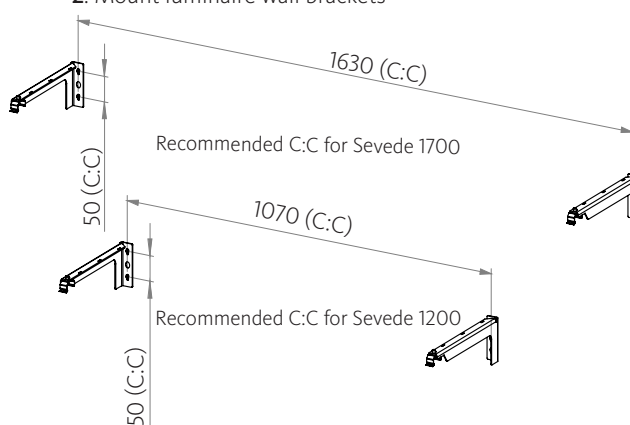


Important

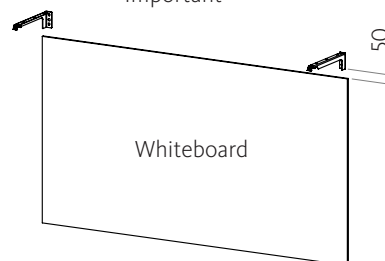



3: Mount luminaire

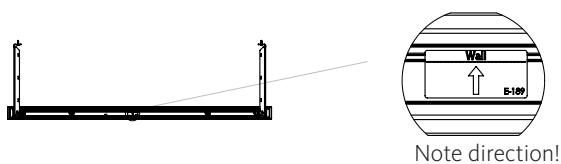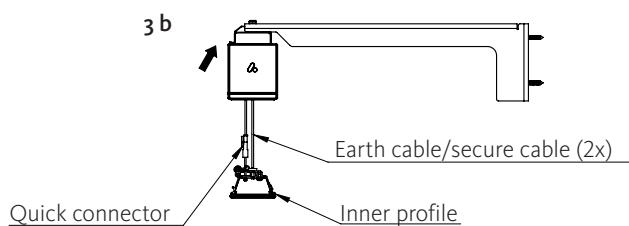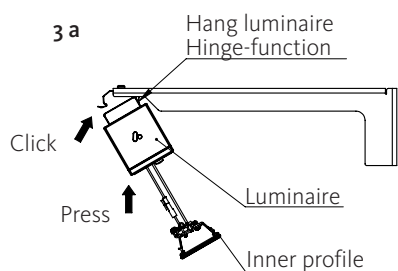



4: Cable installation
Both ends possible

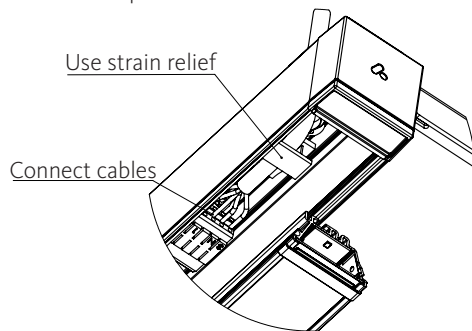


5: Mount inner profile
Cross section visualization
KEEP INSIDE CABLES AWAY when mounting inner profile!

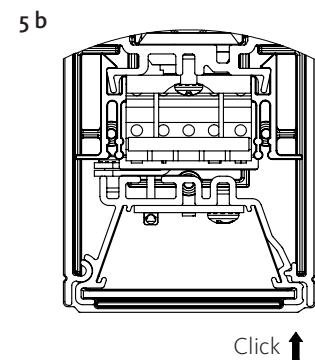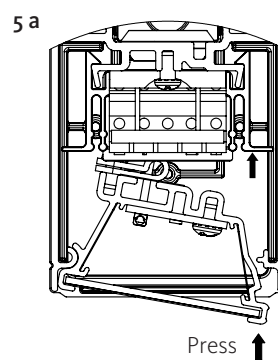

6: Move Light trap, both ends

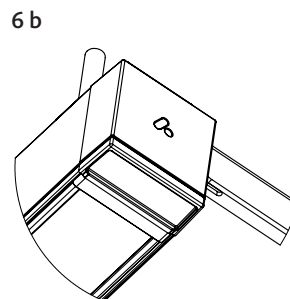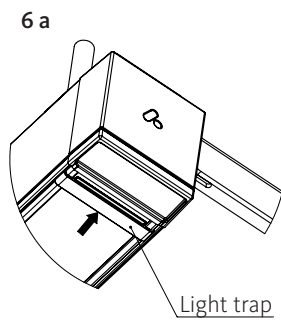


7.

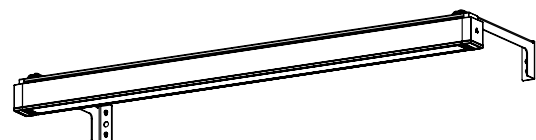


Sevede WA RAMP

Installation manual

1: Prepare luminaires

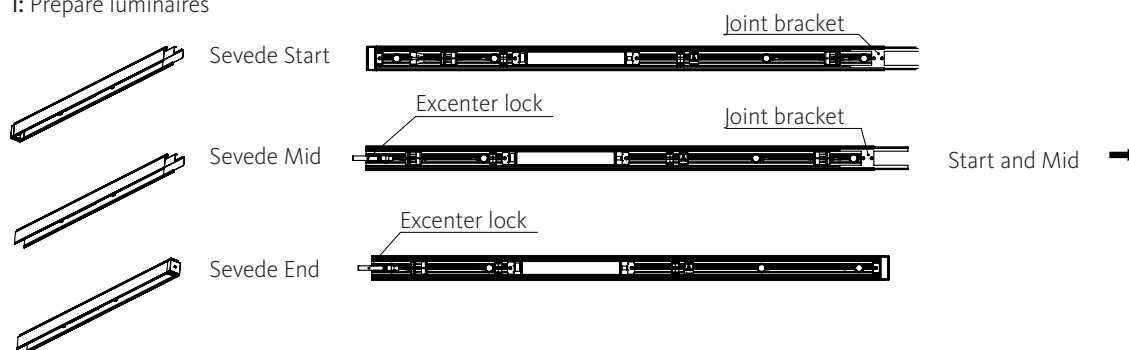


2: Move joint brackets to exact position

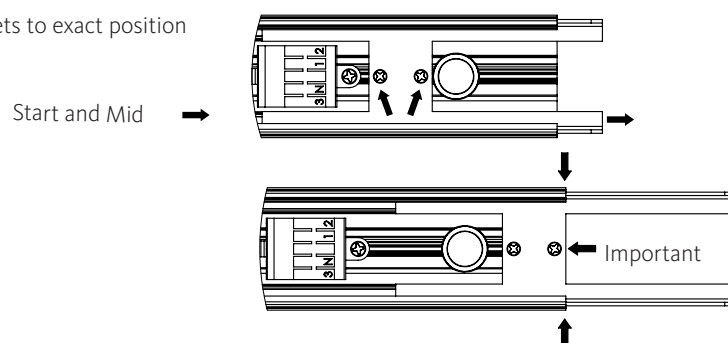


3: Join row-mounted luminaires

 
3 a: Sevede start




3 b: Sevede Mid/End - Slide into Start

 



3 c: Sevede End - Slide into Start/Mid

 

4: Join luminaires mechanically with metal excenter lock Connect cable to terminal block

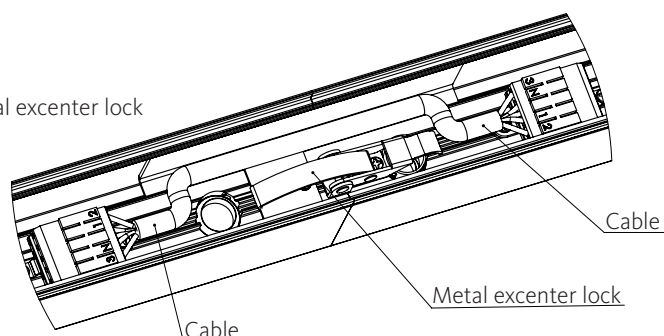

5: Click into wall brackets (See number 1-7 on page 1-2)

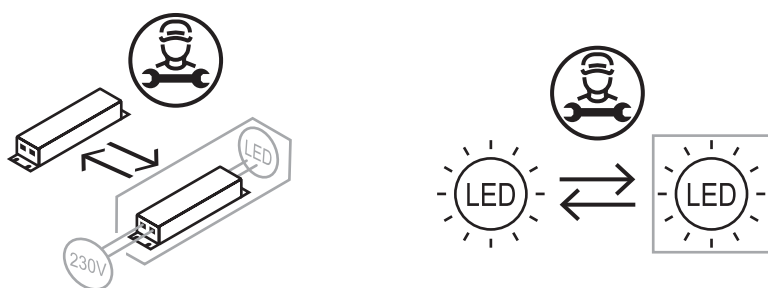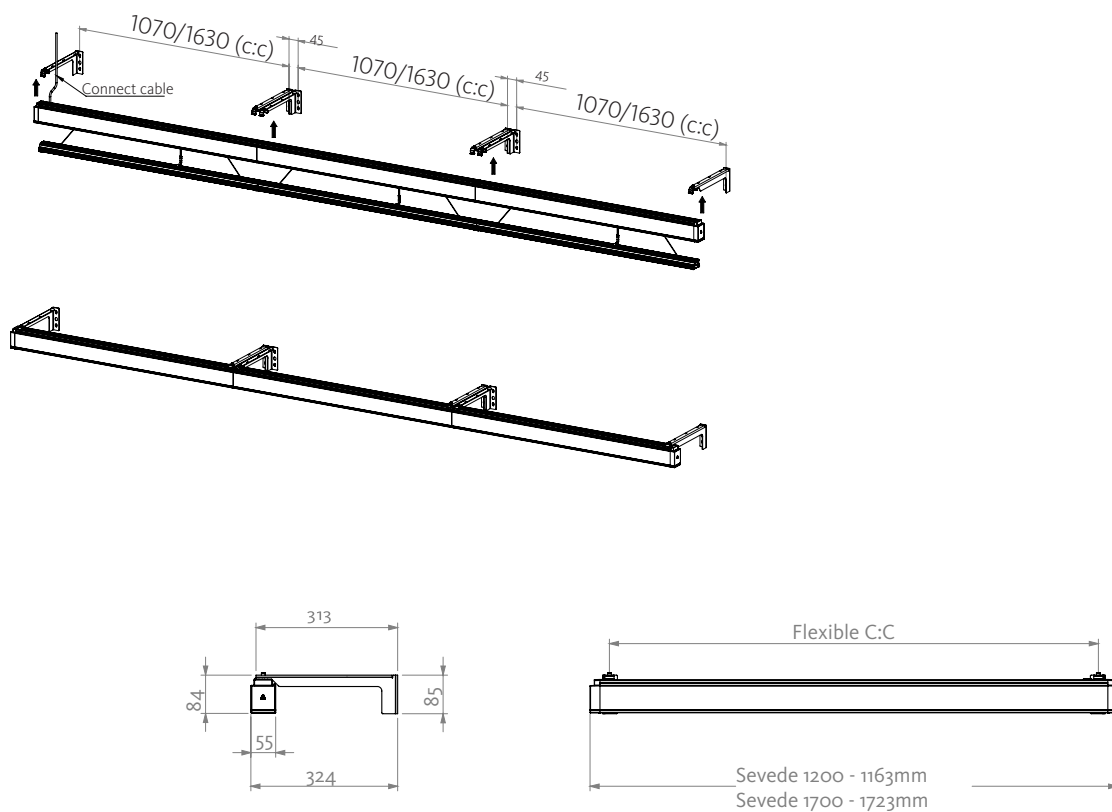

Note: The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Basic insulation between supply- and control-terminals (DALI).

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.



Installation movie