

Alistair LED Stairwell luminaire

Installation manual - Alistair (standard driver)

Caution: If the flexible wire or cord of this luminaire is damaged, it should substitute its technic service exclusively, or by a person with equivalents qualifications with the object of avoid any risk.





Parameters

MODEL NO.	RATED WATTAGE	RATED VOLTAGE	FREQUENCY	ENVIRONMENT TEMP	OUTPUT OF DRIVER	PF	DIMENSION
465303/465304	15 W	200-240 V	50/60 Hz	-20~40° C	350 mA	0.9	300 x 84 mm

Installation (for internal use only)

1: Make sure to turn off the main power.

2: Remove cover from fixture counter clockwise, then loosen the 3 screws, push the clip to lift light source PCB.





3: Pull the power supply wires out the fixture base, screw the fixture base on ceiling.







6: Lock the trim on ceiling light cover by clockwise rotation.





7: Turn the power switch back on to verify that the product is working properly.

Warning!

Disconnect the Unit before replacing the Lamp. Do not use with dimmers. Use double insulation cables from the fixing wiring to connect with the terminal block in luminaire. Make sure wire are connected to terminal by instruction item 4. Do not change LED current selection. If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

Correct Disposal of this product:

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.





Dimensions

