


# Smart sensor slave

Installation manual

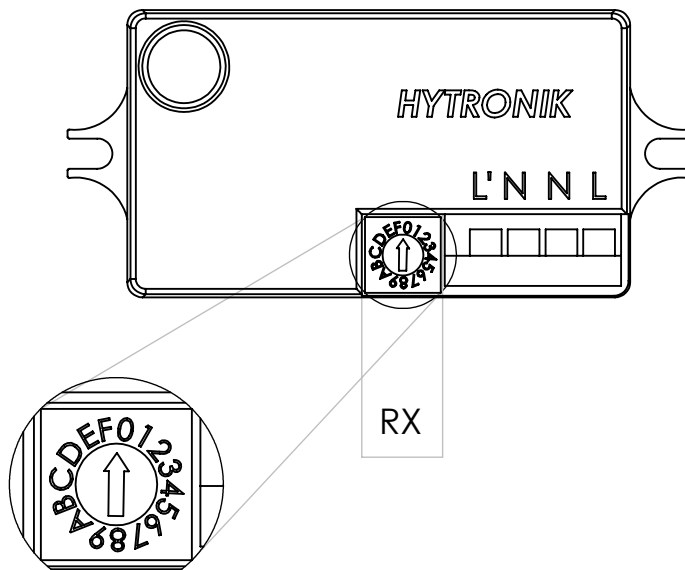

The luminaire acts as slave and has only one receiver addresses(RX).

The luminaire will be activated when a master with the same transmitter address(TX) detects movement.