

! WARNING

- Parts List: LED T8 ECG Compatible Tube, Installation instructions
- Please read the installation instructions carefully and follow instructions to ensure safety
- The LED tube is only suitable with compatible HF-Ballast
- Only to apply in dry indoor usage and environments, outdoor applications requires IP rated fixtures.
- LED lamps must be installed by a professional electrician.
- Once it is installed, do not change any components or structure of the LED lamp.
- This lamp is designed for general lighting service (excluding e.g. explosive atmospheres)
- Ambient temperature (Ta): -20°C to 50°C (-4°F to 122°F)
- This lamp may not be suitable for use in all applications where a traditional fluorescent lamp has been used. The temperature range of this lamp is more restricted. In case of doubt regarding the suitability of the application the manufacturer of this lamp should be consulted.
- No modifications of the luminaire which the LED lamp is to be used with are to be made.
- Lumen-values may differ depending on HF-driver
- A limited amount of drivers require a specific direction of the lamp to be installed, please test the product and confirm functionality before any larger installation
- Not suitable for use with dimmers
- The lamp is design to replace;
 - 600 mm : T8 G13 18W
 - 1200 mm : T8 G13 36W
 - 1500 mm : T8 G13 58W

 AURA LIGHT

www.auralight.com







AURA LED OPTI T8 HF G3



■ Specification

Length (mm)	Base	Power (W)	Color Temperature (K)
600	G13	7,5	3000 / 4000
1200	G13	15	3000 / 4000
1500	G13	23	3000 / 4000 / 5000



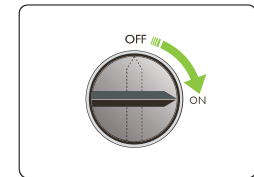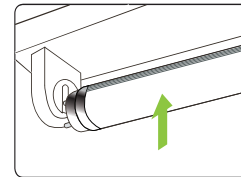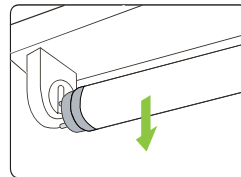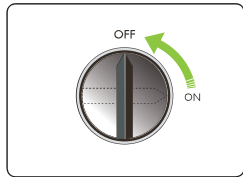

EN 1. Turn the power off

SE 1. Stäng av strömmen

NO 1. Slå av strømmen

DK 1. Sluk for spændingen

FIN 1. Katkaise virta

DE 1. Schalten Sie die Leuchte stromfrei

NL 1. Schakel de stroom uit

ES 1. Desconecte la corriente

FR 1. Coupez l'électricité

PT 1. Desligue a corrente

IT 1. Portare l'interruttore su OFF

2. Remove all existing fluorescent tubes from luminaires if any

2. Ta bort alla befintliga rör från armaturen

2. Ta ut alle eksisterende lysrør fra armaturen

2. Fjern alle lysstofrør fra armaturet

2. Poista valaisimista kaikki loistelamput

2. Entfernen Sie alle Leuchstofflampen insofern vorhanden

2. Verwijder de fluorescentielamp- en indien aanwezig

2. Retire los fluorescentes de las luminarias

2. Retirez tous les tubes fluorescents existants de luminaire

2. Remova todos os tubos fluorescentes existentes nas luminárias

2. Smontare tutti i tubi fluorescenti eventualmente presenti negli apparecchi di illuminazione

3. Install Aura OptiT8 HF Long Life LED retrofit lamp, secure the position by turning the lamp by 90°

3. Installera Aura OptiT8 HF Long Life LED retrofit lamp, säkra positionen genom att vrida ljuskällan 90°

3. Installer Aura OptiT8 HF Long Life LED retrofit røret, sikre posisjon ved å vri på røret 90°

3. Monter Aura OptiT8 HF Long Life LED retrofit lysstofrør, sikre positionen ved at dreje lyskilden 90°

3. Asenne Aura OptiT8 HF Long Life retrofit-lamppu varmista asennus kääntämällä lamppua 90°

3. Setzen Sie die Aura OptiT8 HF Long Life LED-Röhre ein und drehen si die Lampeum 90°, damit sie arretiert.

3. Installeer de Aura OptiT8 HF Long Life retrofit lichtbron. Stel de positie van de lamp in door deze 90° te draaien.

3. Instale el tubo tipo retrofit Aura OptiT8 HF Long Life LED. Asegurar la posición girando la lámpada 90°.

3. Installez le tube Aura OptiT8 HF LED Retrofit et sécurisez sa position par une rotation à 90°.

3. Instale a lâmpada LED retrofit Aura OPTiT8 HF Long Life, e assegure-se da sua posição a 90°.

3. Installare il tubo retrofit LED Aura OptiT8 HF Long Life fissare la posizione ruotando la lampada di 90°.

4. Turn on the power

4. Sätt på strömmen

4. Slå på strømmen

4. Tænd for spændingen

4. Kytke virta päällä

4. Schalten Sie das Licht ein

4. Schakel de stroom in

4. Conecte la corriente

4. Mettez le luminaire sous tension

4. Ligue a corrente

4. Portare l'interruttore su ON